DAEWOO ELECTRONICS

INSTRUCTION MANUAL

COLOR TELEVISION

MODEL: DTQ-20U9SC

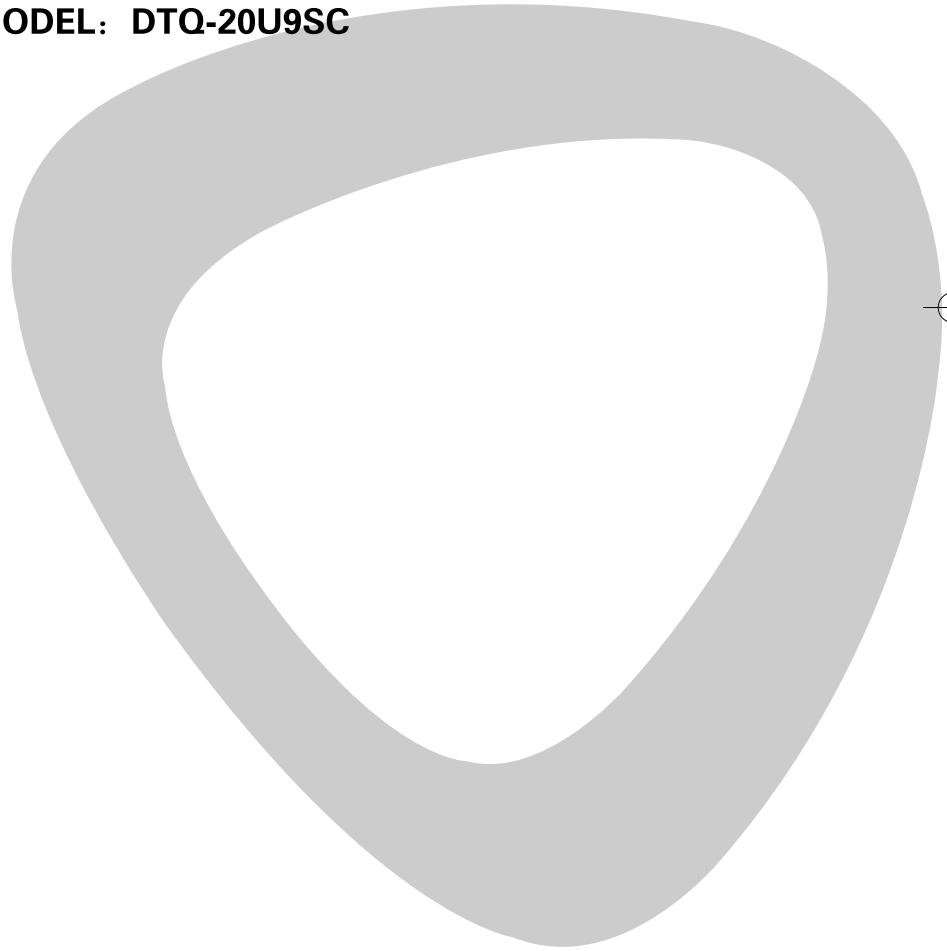

Downloaded from www.Manualslib.com manuals search engine

CAUTION

RISK OF ELECTRIC SHOCK

DO NOT OPEN

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

WARNING

TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER COULD VOID THE USER’S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE TO CATV SYSTEM INSTALLER

THIS REMINDER IS PROVIDED TO CALL THE CATV SYSTEM INSTALLER'S ATTENTION TO ARTICLE 820-40 OF THE NEC THAT PROVIDES GUIDELINES FOR PROPER GROUNDING AND, IN PARTICULAR, SPECIFIES THAT THE CABLE GROUND SHALL BE CONNECTED TO THE GROUNDING SYSTEM OF THE BUILDING, AS CLOSE TO THE POINT OF CABLE ENTRY AS PRACTICAL.

CAUTION

The AC power cord provided with this product is polarized (one blade wider than the other).
To prevent electrical shock, match wide blade of plug to wide slot, fully insert the AC plug into a standard 120V~, 60Hz polarized outlet.

NOTE

Never connect the plug to an electrical source other than one providing 120V~, 60Hz power. Use only the attached power cord. If the polarized AC cord does not fit into a non-polarized outlet, do not cut or file the blade. You are responsible for having the obsolete outlet replaced with a polarized outlet.

If you feel a static discharge when touching the unit, and the unit does not function, simply unplug the unit from the outlet. When you plug the unit back in, it should work normally.

Do not install power cords near any heating element or cooking appliances.

Downloaded from www.Manualslib.com manuals search engine

230E101 - R6 2005.3.2 11:15 AM 페이지52

IMPORTANT SAFEGUARDS

PLEASE READ ALL THESE INSTRUCTIONS REGARDING YOUR TELEVISION EQUIPMENT AND RETAIN FOR FUTURE REFERENCE. FOLLOW ALL WARNINGS AND INSTRUCTIONS MARKED ON THE TV RECEIVER.

1 Read all of these instructions.

2 Save these instructions for later use.

3 Unplug this television equipment from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

4 Do not use attachments not recommended by the television equipment manufacturer as they may result in the risk of fire, electric shock or other personal injury.

5 Do not use this television equipment near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, or the like.

6 Do not place this television equipment on an unstable cart, stand, or table. The television equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Use only with a cart or stand recommended by the manufacturer, or sold with the television equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.

6A An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

PORTABLE CART WARNING

S3126A

7 Slots and openings in the cabinet and the back or bottom are provided for ventilation and to ensure reliable operation of the television equipment; and to protect it from overheating, these openings, must not be blocked or covered. The openings should never be blocked by placing the television equipment on a bed, sofa, rug, or other similar surface. (This equipment should never be placed near or over a radiator or heat register.) This television equipment should not be placed in a built-in installation, such as a bookcase, unless proper ventilation is provided.

8 This television equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your television dealer or local power company.

9 This television equipment is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

10 Do not allow anything to rest on the power cord. Do not locate this television equipment where the cord will be abused by persons walking on it.

11 Follow all warnings and instructions marked on the television equipment.

12 For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

Downloaded from www.Manualslib.com manuals search engine

13 An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.

14 Do not overload wall outlets and extension cords, as this can result in fire or electric shock.

15 Never push objects of any kind into this television equipment through openings, as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television equipment.

16 Do not attempt to service this television equipment yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

17 Unplug this television equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

(a) When the power-supply cord or plug is damaged or frayed.

(b) If liquid has been spilled, or objects have fallen into the television equipment.

(c) If the television equipment has been exposed to rain or water.

(d) If the television equipment does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the TV receiver to its normal operation.

(e) If the television equipment has been dropped or the cabinet has been damaged.

(f) When the television equipment exhibits a distinct change in performance - this indicates a need for service.

18 When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

19 Upon completion of any service or repairs to this television equipment, ask the service technician to perform safety checks to determine that the television is in a safe operating condition.

20 If an outside antenna or cable system is connected to the television receiver, be sure the antenna or cable system is grounded so as to provided some protection against voltage surges and built-up static charges.

Section 810 of the National Electrical Code, ANSI/NFPA N0.70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

EXAMPLE OF ANTENNA GROUNDING

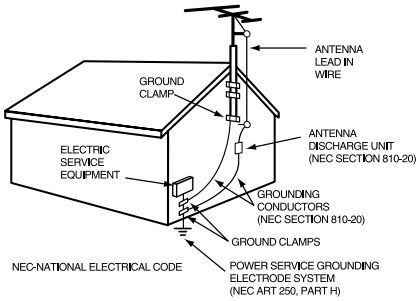
ANTENNA LEAD IN WIRE
GROUND CLAMP
ANTENNA DISCHARGE UNIT (NEC SECTION 810-20)
ELECTRIC SERVICE EQUIPMENT
GROUNDING CONDUCTORS (NEC SECTION 810-20)
GROUND CLAMPS
NEC-NATIONAL ELECTRICAL CODE
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250, PART H)

Downloaded from www.Manualslib.com manuals search engine

Daewoo Electronics America Inc.
120 Chubb Avenue,
Lyndhurst, NJ 07071

Dear Customer :

Daewoo Electronics America Inc. would like to thank you for choosing this color television receiver. It incorporates a host of features designed to give you excellent performance for many years to come.

We realize that you're eager to turn it on and begin enjoying the high-quality pictures it delivers just as quickly as possible, but we ask you to take a few minutes to read the instructions in the booklet to familiarize yourself with the receiver, its functions and some features which may be new to you. If you follow the instructions, this unit should give you many years of viewing pleasure.

If for any reason it does not, we want to hear about it. Please write to us at the address above. Daewoo always welcomes comments and suggestions on this or any of our other products.

On the other hand, when you discover the enjoyment, reliability and ease of use that is built into it, we hope that you will tell your friends, and consider Daewoo when you make your next purchase of home entertainment equipment.

In addition to TV receivers, Daewoo produces a full line of audiovisual products built to the same high design, engineering, and manufacturing standards as this unit.

Here are a few tips that will keep your TV receiver looking great and performing for years to come.

- Avoid putting it in excessively hot locations. Damage to the cabinet or premature component failures can result.
- There are ventilation holes in the bottom and rear of the cabinet. Make sure that they remain unobstructed. Do not place the receiver on top of a thick cloth.
- If you don't plan to use the receiver for several days, it's a good idea to unplug it from the power outlet.
- Many common household cleaning agents, sprays, solvents, and polishes will cause permanent damage to the surface of the cabinet. The best cleaning agents are mild soap and a damp cloth.

Again, thank you for choosing this Daewoo product. We have employed advanced engineering techniques in its design, and manufactured it in one of the world's most up-to-date production facilities. The result is a TV receiver that we know you will be as proud to own as we were to create.

Very truly yours,
Daewoo Electronics
America Inc.

Downloaded from www.Manualslib.com manuals search engine

CONTENTS

Table of Contents

Chapter 1: Overview of Your Equipment

Overview 2
External connection 3
The Buttons On the Remote Control 5

Chapter 2: Connecting an Antenna or Cable to Your TV

Connecting an Antenna 6
Connecting a Cable System 7
Connecting Other Pieces of Equipment 8
Safety Note 8

Chapter 3: Menu operation instruction

Menu basic operation 9
Using the PICTURE menu 9
Using the SOUND menu 9
Using the TIMER menu 10
Using the FUNCTION menu 10
Using the TUNING menu 10
Using the PARENTAL CONTROL menu 11
How to use PARENTAL CONTROL menu 11
Blocking(or unblocking)TV Ratings 12
Blocking(or unblocking)Specific Content Themes 12
Blocking(or unblocking)MPAA RATING 13
Specifications 14
Accessories 14

Chapter 4: Troubleshooting

Troubleshooting 15
Warranty 16

Downloaded from www.Manualslib.com manuals search engine

CHAPTER 1

Overview

1.Power Button
2.Power Indicator
3.Remote Sensor
4.TV/AV Button
5.Menu Button
6.Volume Down Button (VOL▽)
7.Volume Up Button (VOL△)
8.Channel Down Button (CH▽)
9.Channel Up Button (CH△)
10. Headphone
11.Video Input Jack (SIDE)
12.Audio Input Jack (L) (SIDE)
13.Audio Input Jack (R) (SIDE)
14.AV2 Video Input Jack and component input jack (Y)
15.AV1 Video Input Jack
16.Antenna Jack
17.AV1 (S-VIDEO) Audio Input Jack (L)
18.S-VIDEO Input Jack
19.AV1 (S-VIDEO) Audio Input Jack (R)
20. Audio Output Jack (R)
21.Audio Output Jack (L)
22.AV2 (COMP) Audio Input Jack (R)
23.AV2 (COMP) Audio Input Jack (L)
24.Component Input Jack (Cr)
25.Component Input Jack (Cb)

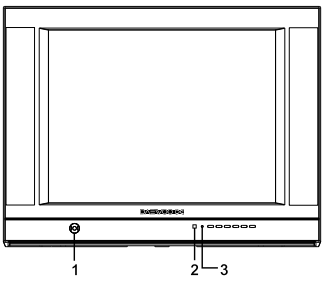

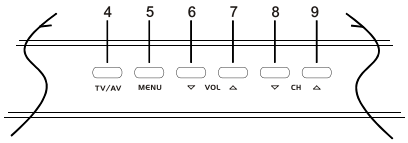

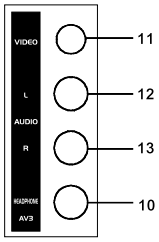

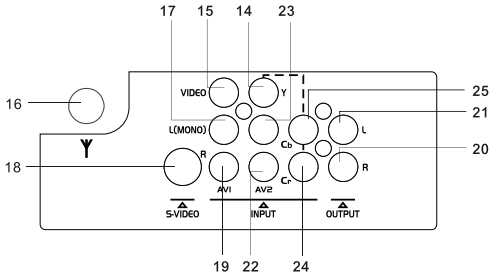

Downloaded from www.Manualslib.com manuals search engine

External connection

The unit can be simultaneously connected to VTR, LD player, DVD player, video camera and other audio-video equipment and obtain quality picture.If your video equipment is provided with S-VIDEO terminal (special S-VIDEO type), please use S-VIDEO output cable to connect to the S-VIDEO input terminal (special S-VIDEO type) of the unit.If there is no this terminal, you may connect the video terminal (Pinhole). For the mono devices, it simply connects audio with the AUDIO L socket.

1.Under AV1, AV2 and S-VIDEO mode, connect the external equipment to back panel of this unit as the following figure shown:

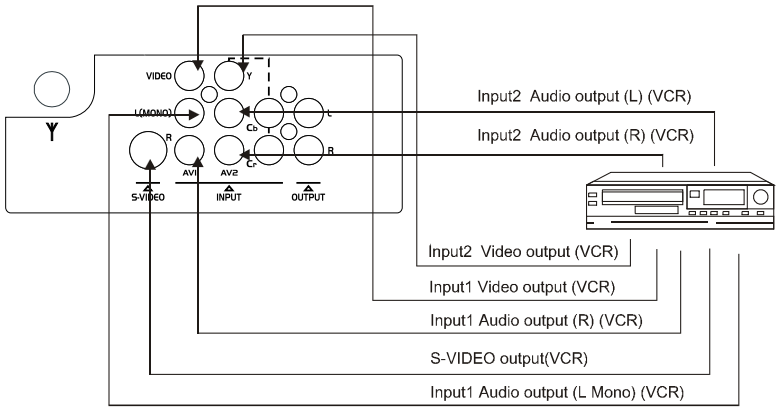

2.Under AV3 mode, connect the external equipment to the side panel of this unit as the following figure shown.

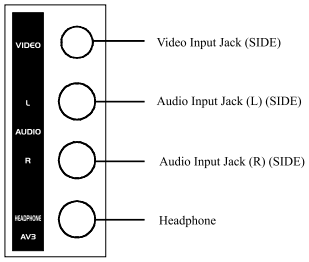

Downloaded from www.Manualslib.com manuals search engine

The Buttons On the Remote control

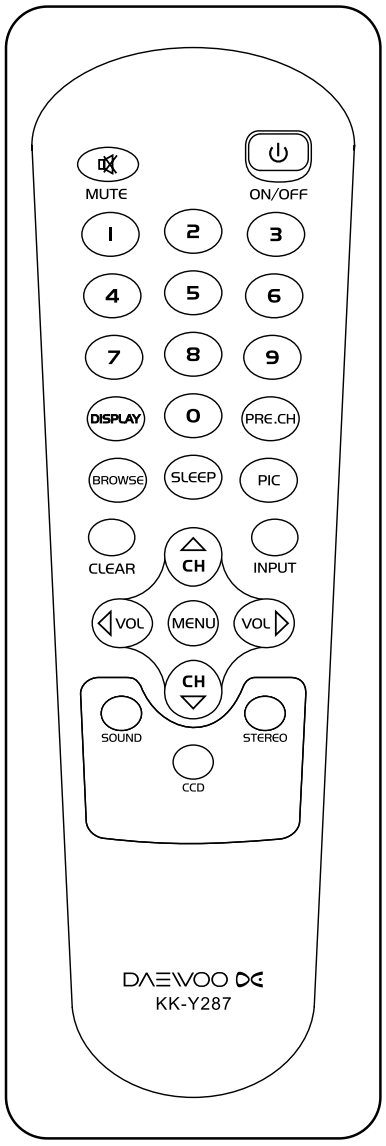

Mute button Lowers the volume to its minimum level. Press again to restore volume.
ON/OFF Turns the TV on and off.
0-9 (Number buttons) Enter channel numbers and time settings directly through the remote control.To enter a two-digit channel, press the two digits. To enter a three-digit channel, press and hold the first digit for two seconds until two dashes appear to the right of the number, then add the second two. Example: to tune a channel 123, press and hold 1 for two seconds, press 2, then press 3.
DISPLAY Displays channel information.
PRE.CH Returns you to the previous channel. If the user is in the menu system, Go Back will take the user to the previous menu screen.
BROWSE "Browse" feature. Pressing the button twice will begin channel scan, again will stop at current channel.
SLEEP Set the sleep timer.
PIC Steps through picture presets USER, SOFT, NORMAL and BRIGHT.
CLEAR Remove any menu or display from the screen and returns you to TV reviewing. For menu with digit inputs, pressing CLEAR button will clear the last number entered.
INPUT Toggles the set between available AV Inputs and therefore input.
MENU Displays the TV's Main menu.
VOL (left and right) buttons Decrease or increase the TV's volume, or move through the on-screen menu system.
CH (up and down) buttons Scan up or down through the current channel list. Press once to change the channel up or down; press and hold to continue changing channels, or move through the on-screen menu system.
SOUND Four preset audio settings for you to select (USER/SPEECH/THEATER/MUSIC)
STEREO Three available audio modes (MONO/STEREO/SAP)
CCD Turns on or turns off the colsed caption.

Downloaded from www.Manualslib.com manuals search engine

The Buttons On the Remote control

Connect to the mains
Inserts the mains wire plug of the unit into 120V AC mains outlet, unplugs the mains when the unit will not be used for a long period time.

How to power on/off
Turns on the power by using the POWER button on the TV or on the remote control.

Non-signal power-off in 15 minutes
In case the unit under non-signal state, TV will be standby mode automatically 15 minutes later, to turn it on please press down POWER button.

Change channels
Changes channels by using the CH/ button on the TV or on the remote control. When ANTENNA is set as AIR, access the channel by pressing two digits on the remote control. When ANTENNA is set as CABLE, use three digits on the remote control to select the channel. To select channels above 100, press and hold the "1" number for 2 seconds. The OSD shows 1--,and then input the other two digits.

Volume UP/DOWN
Adjusts the sound by using VOL/ button on the TV or on the remote control.

Loading batteries: Remove the lid of the battery compartment,insert 2 size AAA batteries with the polarities as indicated inside the compartment then replace the lid.
Note:
1. One loading of batteries will last 1 year under normal use.
2. If you do not intend to use the remote control for a long period of time, remove them to avoid damage due to leakage.

Downloaded from www.Manualslib.com manuals search engine

CHAPTER 2

Connecting an Antenna or Cable to Your TV

Your TV will provide you with the best performance if you connect it to an external antenna or cable system. Follow the directions below make this connection. Please note that you will normally only have to make one of the connections shown below, not all of them.

All connections will be made to the antenna terminal on the back of your TV. The antenna terminal is a silver metal post partially surrounded by two plastic tabs. For help in locating the antenna terminal, see "Your TV's Back Panel" on page 3.

Connecting an Antenna

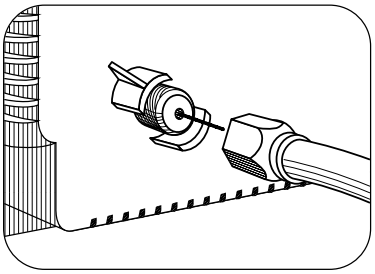

If your antenna ends in a single coaxial lead, simply press or screw the cable onto the antenna terminal on the back of your TV.

If your antenna ends in a pair of 300 ohm twin leads , you must use a 300-ohm/75-ohm adapter(available at your local electronics store). Place the leads underneath the screws on the adapter, tighten the screws, then press the adapter onto the antenna terminal on the back of the TV.

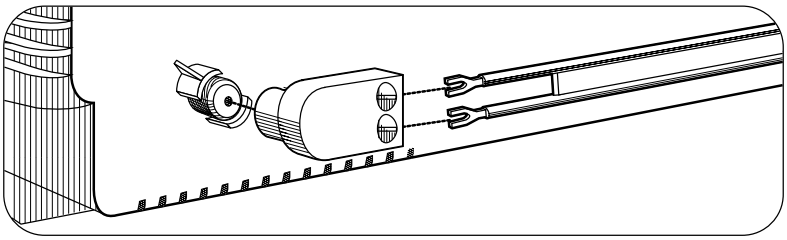

(The rod antenna need to be purchased separately.)

Downloaded from www.Manualslib.com manuals search engine

Antennas with two sets of leads

You might have two sets of leads from your antenna system, especially if you have one antenna for VHF signals and one antenna for UHF signals.

If your antenna system has both a coaxial lead and twin 300-ohm leads, you must obtain a combiner (available at your local electronics store). Press or screw the coaxial lead onto the combiner; place the twin leads underneath the screws on the combiner and tighten the screws. Press the cable from combiner onto the antenna terminal on the back of your TV.

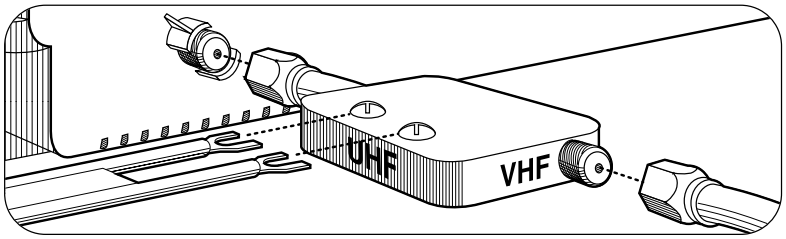

If your antenna system has two sets of twin 300-ohm leads, you must obtain a combiner (available at your local electronics store). Place one set of twin leads underneath the screws on the combiner and tighten the screws. Do the same with the other set of twin leads. Press the cable from the combiner onto antenna terminal on the back of your TV.

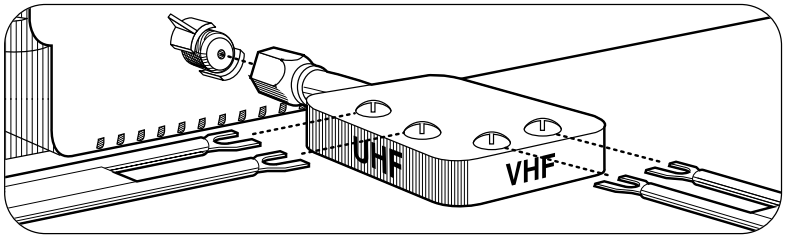

Connecting a cable system

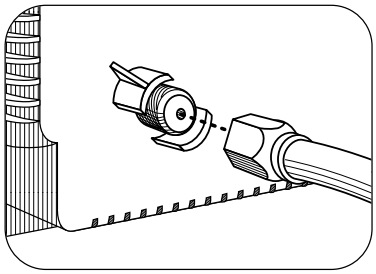

If your cable set-up is not described below, please contact your cable company for more information.

If your cable system does not require the use of a cable box, simply press or screw the incoming cable onto the antenna terminal on the back your TV.

Downloaded from www.Manualslib.com manuals search engine

If your cable system requires you to use a converter box for all channels, connect the incoming cable to the IN terminal on the converter box. Connect another cable between the OUT terminal on the converter box and the antenna terminal on the TV. You will need to keep your TV tuned to channel 3 or 4 and change channels using the converter box.

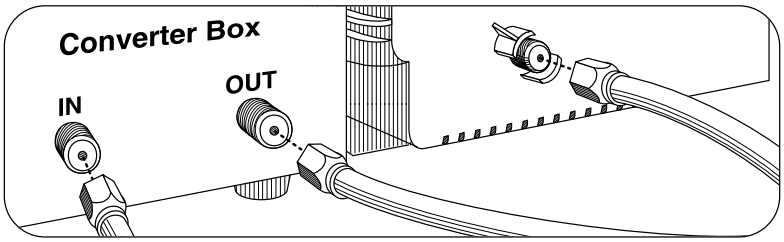

If your cable system only requires you to use a converter box for some channels (i. e. pay-TV channels), follow these steps: Find the primary incoming coaxial cable. Plug this cable into a splitter (available at your local electronics store). Connect one coaxial cable between one OUT terminal on the splitter and the IN terminal on the converter box. Connect another coaxial cable between the other OUT terminal on the splitter and the B-IN terminal on an A/B switch (available at your local electronics store.) Connect a third coaxial cable between the OUT terminal on the converter box and the A-IN terminal on the A/B switch. Finally, connect a coaxial cable between the OUT terminal on the A/B switch and the antenna terminal on the back of your TV.

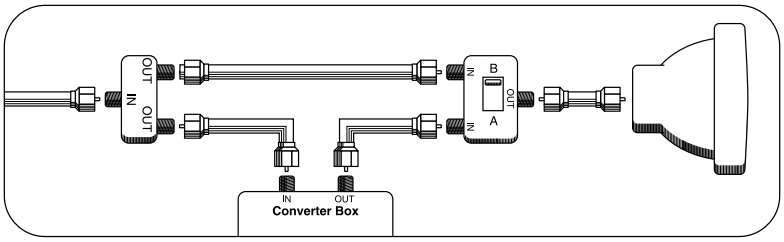

When the A/B switch is in the A position, you need to change channels on the converter box (and your TV should be tuned to channel 3 or 4); when the A/B switch is in the B position you can change channels on the TV.

Connecting Other Pieces of Equipment

You may want to connect a VCR, laser disc player, satellite receiver, or another type of equipment to your TV. We recommend that you follow the instructions included with the piece of equipment you wish to connect.

Safety Note

If you plan on being away from your home for an extended period of time, or if a thunderstorm is approaching, you should unplug your television, and you may wish to disconnect your TV from a rooftop or satellite antenna. You do not need to disconnect your TV from a cable system.

Downloaded from www.Manualslib.com manuals search engine

CHAPTER 3

Menu operation instruction

Menu basic operation

1. To enter a menu, press the menu button on the TV or on the remote control, then use the VOL▽/△button in front of TV(or▽/△button on the remote control) to select the icon.
2. Press CH▽/△button on the TV or on the remote control to select the mode you want to change.
3. Use the VOL▽/△button on the TV or on the remote control to change the setting.
4. Press MENU button on the TV or on the remote control to return the previous menu.You can press the CLEAR button on the remote control to exit the menu operaton directly.

Using the PICTURE menu

The PICTURE menu will allow you to make an adjustment to your picture settings. It will also allow you to customize the picture mode based on the type of program you are viewing.

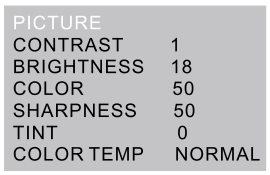

Figure

CONTRAST	Adjust the difference between the light and dark areas of the picture.
BRIGHTNESS	Adjust left/right to darken/brighten the picture.
COLOR	Adjust left/right to decrease/increase color intensity or saturation.
SHARPNESS	Adjust left/right to soften/sharpen the picture detail.
TINT	Adjust the balance between the red and green levels.
COLOR TEMP	Provide three automatic color adjustments: Cold for a more blue palette of picture color; Normal; Warm for a more red palette of picture color.

Using the SOUND menu

The SOUND menu allows you to make an adjustment to your sound settings.



Figure

BASS	Adjust left/right to decrease/increase low pitched sound.
TREBLE	Adjust left/right to decrease/increase high pitched sound.
BALANCE	Adjust left/right to emphasize left/right speaker balances.
SURROUND	Turn on or off the surround sound effect.

Downloaded from www.Manualslib.com manuals search engine

Menu operation instruction

Using the TIMER menu

The TIMER menu sets the clock on your TV and allows you to program your TV for scheduled viewing using the timer.

Figure

SLEEP TIMER:Set the sleep timer.

Using the FUNCTION menu

The FUNCTION menu provides several options for setting up your TV.

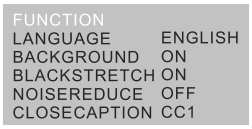

Figure

LANGUAGE	Select from available language to display all menu your desire. (You can select English,French or Spanish).
BACKGROUND	Turn on or off the background function when no signal is received.
BLACK STRETCH	Turn on or off black stretch function.
NOISE REDUCE	Turn on or off the noise reduce function.
CLOSE CAPION	Offer eight closed captioned modes, including four text modes.

Note: The BACKGROUND function isn't available in RF input.

Using the TUNING menu

The Tuning menu offers some operation about tuning and channel.

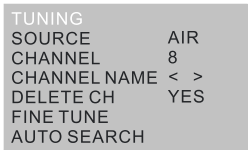

Figure

SOURCE	Let you select AIR or CABLE. Select AIR to receive radio broadcast signal. Select CABLE to receive CATV signal.
CHANNEL	Use the VOL▽/△button on the TV or on the remote control to scroll up and down through the channels available via your antenna. You can enter the channel number directly using the number buttons.

Downloaded from www.Manualslib.com manuals search engine

CHANNEL NAME	Allow you to name a channel. The channels you can name are only from 2 to 11 in AIR. You can use the VOL▽/△button on the TV or on the remote control to enter a five character label for each channel.
DELE CH	Select YES to skip the channel above. Select NO to go into the channel above.
FINE TUNE	Select it to process a tuning exactly in a channel.
AUTO SEARCH	Select it to start channel search and store automatically.

Using the PARENTAL CONTROL menu

The PARENTAL CONTROL menu allows you to program your TV so that children cannot see certain programs, channels, or use the front panel control.

Figure

PASSWORD Only right password can enter the PARENTAL CONTROL menu. The initial password is "1234". If you use this menu the first time, you should change the password to keep children from using this menu. If you forget the password, please input the super password 5898 to enter this submenu and reset the password.

How to use PARENTAL CONTROL menu

When you enter a right password, the PARENTAL GUIDE menu will display on the screen(shown as the figure below).

Figure

PARENTAL GUIDE Select "OFF" to ignore the V-CHIP. Select "ON" to activate the V-CHIP(see the figure below).

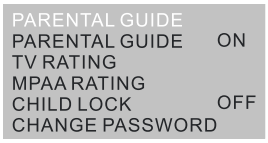

Figure

Downloaded from www.Manualslib.com manuals search engine

Menu operation instruction

TV RATING Select it to display the submenu(see the figure below).

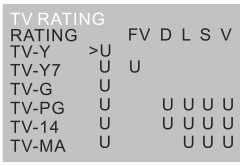

Figure

Tip: Unblock (U), block(B), ">"(selection indicator)

The TV ratings and content themes you can block are listed in the following two tables:

Hierarchy of Age-Based Ratings	
TV-Y	All Children
TV-Y7	Directed to Children 7 years and older
TV-G	General Audience
TV-PG	Parental Guidance Suggested
TV-14	Parents Strongly Cautioned
TV-MA	Mature Audience Only

table 1

Content Themes	
D	Sexually explicit dialogue
L	Adult language
S	Sexual situations
V	Violence
FV	Fantasy Violence
TV-Y	All Children

table 2

Blocking(or unblocking)TV Ratings

You can automatically block(or unblock) all program ratings above(or below) to a specified TV rating level. To block(or unblock) programs with higher(or lower) ratings:

1.Press the CH▽/△button on the TV or on the remote control to highlight the lowest(or highest) level rating that you want to block(or unblock).
2.Press the VOL▽/△button on the TV or on the remote control to toggle between U and B. Then the level rating and all higher (or lower) ratings automatically change to B(or U).
3.Press the MENU button on the TV or on the remote control to return to the previous menu.

Blocking(or Unblocking) Specific Content Themes

You can block(or unblock) programs based on their content(see table 2). When you block(or unblock) a content theme for a particular rating, you automatically block(or unblock)that content themes for higher (or lower)rated programs as well.

1.Press the CH▽/△button on the TV or on the remote control until the lowest(or highest) level of content you want to block(or unblock) is highlight. Then the label ">" will move there.
2.Press the VOL▽/△button on the TV or on the remote control to change content status to B(or U). Then all higher(or lower) rating's content theme will automatically change to B(or U).
3.Press the MENU button on the TV or on the remote control to return to the previous menu.

Downloaded from www.Manualslib.com manuals search engine

Menu operation instruction

MPAA RATING Select it to set up Movie Ratings(as the figure below shown).

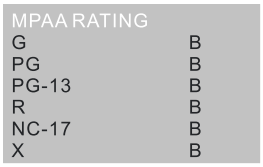

Figure

The movie ratings you can block are listed in the following table:

Hierarchy of MPAA RATINGS	
G	All Children
PG	Directed to old Children
PG-13	General Audience
R	Parental Guidance Suggested
NC-17	No one under17 admitted
X	No one under 17 admitted

Table

Blocking(or Unblocking) MPAA RATING

When you block(or unblock) a movie rating, the system will automatically block(or unblock) all other m-ovies with higher(or lower) ratings.

1.Press the CH▽/△button on the TV or on the remote control to highlight the lowest(or highest) rating that you want to block(or unblock).

2.Press the VOL▽/△button on the TV or on the remote control to change it to B(or U). All higher(or lower) ratings will automatically change to B(or U).

3.Press MENU button on the TV or on the remote control to return to the previous menu.

NOTE: Picture will display background and on mute mode if TV you watched over preset level. To watch these programs, please reset the rating level.

CHILD LOCK	Selecting "ON" lets you block the TV's front panel and all programs. And the TV will be on mute mode. The CHILD LOCK will take effect when the TV turns on next time.
CHANGE PASSWORD	Allow you to change the password of the PARENTAL CONTROL menu. When you select it, the figure below will be display on the screen.

Downloaded from www.Manualslib.com manuals search engine

Menu operation instruction

Figure

NEW PASSWORD	Enter a new password. You can use number buttons to input a new password.
CONFIRM	Enter the same number to confirm the new password.

Specifications

Color system:NTSC
Power supply:~120 V 60Hz
Power consumption:80 W
Picture tube :20"
Audio output:2X2 W
Dimensions: 588X473X454mm (WXDXH)
Weight:23.7kg
Tuner type:181 Channela,Quarts PLL frequency systhesized
Remote control:27key,2 size AAA batteries
Channel coverage:VHF 2-13 UHF 14-69 CATV 1-125
Anterna input impedance:75(VHF/UHF/CATV)coaxial input

Accessories

1.User's Manual
2.Remote control

Downloaded from www.Manualslib.com manuals search engine

CHAPTER 4

Troubleshooting

Your Daewoo television is designed to give you trouble-free performance for many years. If you have a problem with your TV, try the solutions listed below.

If the suggestions listed below do not solve your problem, contact your Daewoo dealer or an authorized Daewoo service center.

There is no picture or sound, or the TV doesn't turn on.

Make sure the TV is plugged in.
Make sure the MUTE is not set.
Make sure the power is on.
If there is neither picture or sound, unplug the TV for 30 seconds, then plug it in and try again.

There is no picture or sound on some UHF channels.

Try another station. If the other stations are OK, it may be a station problem.
Check that the antenna is connected, is in good working order, has no broken wires, and is adjusted correctly.
See if anything is interfering with the antenna signal.
Make sure the AIR/CABLE setting is correct.

The sound is OK, but the picture is poor.

Try another station. If the other stations are OK, it may be a station problem.
Check that the antenna is connected and is in good working order, has no broken wires, and is adjusted correctly.

The picture is OK, but the sound is poor.

Try another station. If the other stations are OK, it may be a station problem.
Check that the antenna is connected, is in good working order, has no broken wires, and adjusted correctly.

There is poor reception on some channels.

Try another station. If the other stations are OK, it may be a station problem.
Check that the antenna is connected, is in good working order, has no broken wires, and is adjusted correctly.

You cannot tune to a cable channel.

Make sure the AIR/CABLE setting is correct.
The channel may not be programmed into memory.

The picture rolls, slants, shows lines, is grainy, has poor color, or has ghosts.

Try another station. If the other station are OK, it may be a station problem.
Check that the antenna is connected, is in good working order, has no broken wires, and is adjusted correctly.
See of anything is interfering with the antenna signal.

The remote control does not work.

Make sure the TV is plugged in.
Make sure there are fresh batteries in the remote control.
Make sure there is nothing blocking the remote control signal.

Downloaded from www.Manualslib.com manuals search engine

Warranty

Daewoo Electronics America Inc. warrants each new electronic product manufactured by it to be free from defective material and workmanship and agrees to remedy any such defect or to furnish a new part (at the Company's option) in exchange for any part of any unit of its manufacture which under normal installation, use, and service disclosed such defect, provided the unit is delivered by the owner to us or to our authorized distributor from whom purchased or authorized service station, intact, for our examination with all transportation charges prepaid to our factory. To establish and receive warranty service at our factory or authorized service facilities, proof of purchase/dated sales invoice is required

Return authorization must be obtained before any merchandise is returned to the factory.

This warranty does not extend to any of our electronic products which have been subjected to misuse, neglect, accident, incorrect wiring not our own, improper installation, unauthorized modification, or to use in violation of instructions furnished by us, nor units which have been repaired or altered outside of our factory, nor to cases where the serial number thereof has been removed, defaced, or changed.

This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for us any other liability in connection with the sake of our electronic products.

Over-the-counter exchange for units that are initially defective
"Initially defective"is described as when the dealer opens the unit and finds that it is inoperative or a customer opens a new unit and finds that it is inoperable. This unit may be returned to the factory by the dealer for exchange. Under no circumstances will the customer be permitted to return the defective unit directly to the factory.
Exchange must be directly with the dealer.

Parts	Labor	Picture Tube
1 year	90 days	2 years

Downloaded from www.Manualslib.com manuals search engine

This instrument is listed by Underwriter's Laboratories, Inc. It is designed and manufactured to meet rigid U.L. safety standards against X-radiation, fire, casualty and electrical hazards.

DAEWOO ELECTRONICS

Daewoo Electronics America Inc.
120 Chubb Avenue
Lyndhurst, NJ 07071

For more information about this or other Daewoo products, please call 1-800-DAEWOO8.

Downloaded from www.Manualslib.com manuals search engine